

S3Z SERIES INSTRUCTION MANUAL

CONTROLS

OUTPUT LED

The yellow LED indicates the output status.

STABILITY LED (S3Z...B01/C01/C11/F01)

The green LED ON indicates that the received signal has a safety margin greater than 20% compared to the output switching value.

POWER ON LED (S3Z...G00)

The green LED indicates that the sensor is operating.

TRIMMER (S3Z...B01/C01/C11/F01)

The trimmer can be used to adjust sensitivity; the operating distance increases turning the trimmer clockwise.

ADJUSTMENT SCREW (S3Z...M)

This control can be used to adjust the cutoff distance (6 turns screw); the operating distance increases turning the control clockwise.

WARNING ONLY FOR TRIMMER (S3Z...B01/C01/C11/F01) MODEL:

The trimmer rotation is limited to 260° by a mechanical stop.
Do not apply excessive torque when adjusting (max 0.05 Nm).


INSTALLATION

The sensor can be positioned by means of the two housing's threaded holes (M3) using two screws (M3x12 or longer or M2.5 passing screw, 0.5 Nm maximum tightening torque) with washers.


Various orientable fixing brackets to ease the sensor positioning are available (please refer to the accessories listed in the catalogue).

CONNECTIONS

S3Z...B01/C01/C11/F01

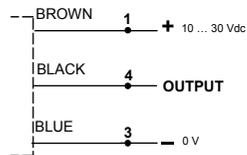

S3Z...G00

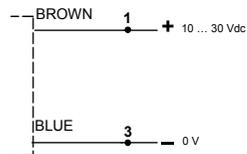


CONNETTORE M8




DIMENSIONS

CABLE VERSION

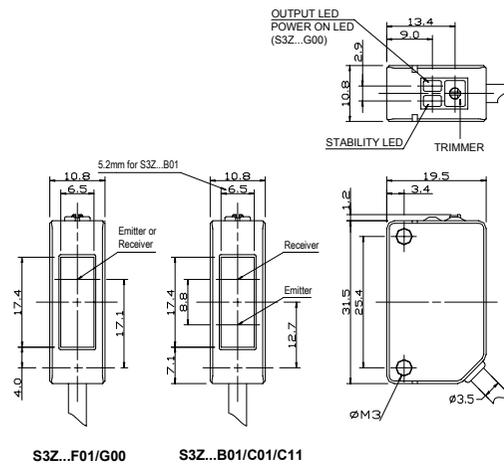

M8 CONNECTOR VERSION

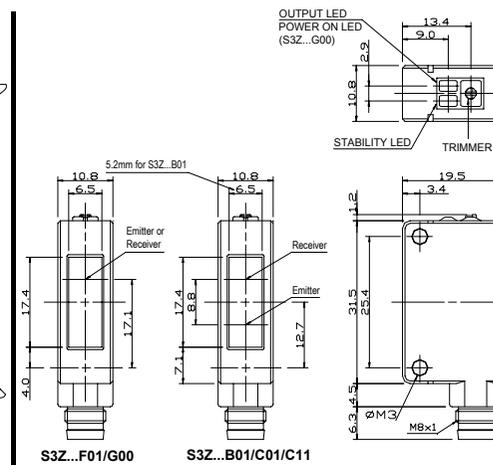

TECHNICAL DATA

	S3Z...B01	S3Z...C01	S3Z...C11	S3Z...F01/G00	S3Z...M
Power supply:	12 ... 24 Vdc (operating limit 10...30Vdc); reverse polarity protected				
Ripple:	p-p 10% max.				
Current consumption (output current excluded):	30 mA max.				
Output:	LIGHT or DARK; PNP or NPN; (short-circuit protection)				LIGHT; PNP or NPN; (short-circuit protection)
Output current:	100 mA max.				
Output saturation voltage:	1.2 V max.				2.0 V max.
Response time:	1 ms max.				
Switching frequency:	500 Hz max.				
Indicators:	OUT LED (YELLOW) STABILITY LED (GREEN) mod. B01/C01/C11/F01 POWER ON LED (GREEN) mod. G00				
Setting:	TRIMMER mod. B01/C01/C11/F01				6 turns screw
Operating temperature:	-25 ... +55 °C				
Storage temperature:	-25 ... +70 °C				
Operating distance (minimum):	see tab.1	50...150 mm	0...70 cm	0...15 m	50...250 mm.
Difference on White 90% / Gray 18%	---		---		22% @ 200mm.
Emission type:	RED (665 nm)		INFRARED (870 nm) mod. C11/G00		RED (670 nm)
Ambient light rejection:	according to EN 60947-5-2				
Vibration:	0.5 mm amplitude, 10 ... 55 Hz frequency, for every axis (EN60068-2-6)				
Shock resistance:	11 ms (30 G) 6 shock for every axis (EN60068-2-27)				
LIGHT/DARK selection:	dependently from the model				
PNP/NPN Output	dependently from the model				
Housing:	Body PC and PBT / indicators cover PC				
Lenses:	PMMA mod.B01 / PC mod.C01/C11/FG01				
Lenses:	PMMA	PC		PMMA / PC	
Protection class:	IP67				
Connections:	2 m cable Ø 3.5 mm / M8-4 pole connector				
Weight:	50 g. max. cable versions / 10 g. connector versions				

SETTING

Alignment S3Z...B01

Position the sensor and reflector on opposite sides.
Turn the sensitivity trimmer to maximum. Find the points where the yellow LED (OUT) is switched ON and OFF in both vertical and horizontal positions, and fix the sensor in the centre between these points.

Optimum operation is obtained when the green LED is ON.

If necessary, reduce sensitivity using the trimmer, in order to detect very small or transparent targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

Alignment S3Z...F01/G00

Position the sensors on opposite sides.

Find the points where the yellow LED (OUT) is switched ON and OFF in both vertical and horizontal positions, and fix the sensor in the centre between these points.

Optimum operation is obtained when the green LED is ON.

Alignment S3Z...C01/C11 (LIGHT mode)

Position the sensor and turn the sensitivity trimmer at minimum:

the green LED is ON and the yellow LED is OFF.

Place the target opposite the sensor.

Turn the sensitivity trimmer clockwise until the yellow LED turns ON (*Target detected state, pos.A*). Remove the target, the yellow LED turns OFF. Turn the trimmer clockwise until the yellow LED turns ON (*Background detected state, pos.B*). The trimmer reaches maximum if the background is not detected. Turn the trimmer to the intermediate position C, between the two positions A and B. The green LED must be ON.

For S3Z...C01/C11 models in DARK mode, the OUTPUT LED and the output are inverted.

Alignment S3Z...M

Position the sensor and turn the adjustment screw to maximum.

Place the target opposite the sensor at a slightly greater distance than desired. Turn the screw counterclockwise until the sensor switches.

Verify the adjustment moving the target closer and further the sensor; tune the adjustment if necessary.
It is recommended to operate with the stability LED turned ON.



TABLE 1: S3Z...B01 max. operating distance table (meters)

-B01	REFLECTOR					
	R1	R2	R3	R4	R5	R6
	1.5	2.5	2.1	3	3	3.5

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265
40050 Monte S. Pietro - Bologna - Italy
Tel: +39 051 6765611 Fax: +39 051 6759324
http://www.datasensor.com e-mail: info@datasensor.com



DATASENSOR S.p.A. cares for the environment: 100% recycled paper.
DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.