

Kemro
SX 220/A
Serial option module
Project engineering manual V2.04

Translation of the original instructions

Document : V2.04 / article no.: 1000889
Filename : sx220apjen.pdf
Pages : 24

© KEBA 2011

Specifications are subject to change due to further technical developments. Details presented may be subject to correction.

All rights reserved.

A: KEBA AG, Gewerbepark Urfahr, A-4041 Linz, Tel.: +43 732 7090-0, Fax: +43 732 7309-10, E-Mail: keba@keba.com
D: KEBA GmbH Automation, Leonhard-Weiss-Straße 40, D-73037 Göppingen, Tel.: +49 7161 9741-0, Fax: +49 7161 9741-40, E-Mail: keba@keba.com
US: KEBA Corp., 100 West Big Beaver Road, Troy, MI 48084, US, Tel.: +1 248 526-0561, Fax: +1 248 526-0562, E-Mail: usa@keba.com
CN: Beijing Austrian KEBA Science and Technology Development Ltd., Room B516, Nan Xin Cang Tower, A22 Dong Si Shi Tiao, Dong Cheng District, Beijing, 100027, P.R. China, Tel. +86 10 6409-6592, Fax +86 10 6409-6312, E-Mail: china@keba.com

www.keba.com

Record of Revision

Version	Date	Change in chapter	Description	changed by
1.00	09-2005		Newly created	meis
2.00	06-2006		Various changes	meis
2.01	04-2007		New structuring of the project engineering manual	meis
2.02	09-2008		Various changes	kalt
2.03	08-2010	EC directives and standards, Safety notes, Declaration of conformity	updated	hasl
2.04	08-2011	Introduction	Hint "not for end customers" added, various minor updates.	fstl

Table of Contents

1	Introduction	7
1.1	Purpose of the document.....	7
1.2	Preconditions.....	7
1.3	Intended use.....	8
1.4	Notes on this document.....	8
1.4.1	Contents of the document.....	8
1.5	Documentation for further reading.....	8
2	Safety notes	9
2.1	Representation.....	9
2.2	General safety instructions.....	9
3	Description of the module	11
3.1	Front view.....	11
4	Installation instructions	12
4.1	Inserting an option module into slot.....	12
4.2	Removing an option module.....	13
5	Connections and wiring	15
5.1	General information on wiring and shielding.....	15
5.2	Current loop interface.....	15
5.2.1	Connection example.....	15
5.2.2	Pin assignment.....	17
5.2.3	Loop currents and voltages.....	17
5.2.4	Operating modes "active" and "passive".....	18
5.2.5	DIP switch position.....	18
5.2.6	Cable and plug specification.....	18
5.3	EMC and wiring guidelines.....	18
6	Configuration	19
7	Operating behavior	20
7.1	Start-up after Power-On.....	20
7.2	Reset.....	20
8	Disposal	21
8.1	Disposal of the module.....	21
9	Technical data	22
9.1	Environmental conditions.....	22
9.2	Interface to CPU module.....	22
9.3	Serial interface.....	22
9.4	Mechanics.....	22
10	EC directives and standards	23
10.1	EC directives.....	23

10.2	Standards.....	23
10.2.1	General procedures and safety principles.....	23
10.2.2	EMC guideline.....	23
10.2.3	Electrical safety and fire protection.....	23
10.2.4	Environmental and surrounding conditions.....	23
10.3	Standards for the American market.....	23
10.3.1	UL test for industrial control equipment.....	23
11	Declaration of conformity.....	24

1 Introduction

1.1 Purpose of the document

This document describes the structure of the SX 220/A (serial option module).

Information

This manual is not addressed to end costumers! Necessary safety notes for the end costumer have to be taken into the costumer manual in the respective national language by the machine builders and system providers.

1.2 Preconditions

This document contains information for persons with the following skills:

Target group	Knowledge and skills pre-requirement
Project engineer	Basic technical training (University of Applied Science/University level, engineering degree or corresponding professional experience). Knowledge in: <ul style="list-style-type: none"> ● working mode of a PLC, ● safety regulations, ● the application.
Operator	Basic technical training (Vocational high school, engineering degree or corresponding professional experience). Knowledge in: <ul style="list-style-type: none"> ● safety regulations, ● working mode of machine or plant, ● principal functions of the application, ● system analysis and troubleshooting, ● setting options at the operating installations.
Service technician	Basic technical training (Vocational high school, engineering degree or corresponding professional experience). Knowledge in: <ul style="list-style-type: none"> ● working mode of a PLC, ● safety regulations, ● working mode of machine or plant, ● diagnosis possibilities, ● systematic error analysis and rectification.

1.3 Intended use

The SX 220/A may only be used for the types of use described in the technical descriptions and only in conjunction with recommended/approved third-party equipment/installations.

The SX 220/A has been developed, manufactured, tested and documented in accordance with the appropriate safety standards. Therefore, the products do not pose any danger to the health of persons or a risk of damage to other property or equipment under normal circumstances, provided that the instructions and safety precautions relating to the intended use are properly observed.

1.4 Notes on this document

This manual is integral part of the product. It is to be retained over the entire life cycle of the product and should be forwarded to any subsequent owners or users of the product.

1.4.1 Contents of the document

- Description of the SX 220/A
- Use of the option module in CPU modules
- Description of interface including EMC measures
- Technical data

1.5 Documentation for further reading

The following documents are to be observed depending on the system solution used:

If you are using the KeStudio U2 tool suite:

Doc.No.	Name	Target group
DE: 65352 EN: 65353	K2-200 automation system manual	<ul style="list-style-type: none"> • Project engineer • Electrician • Programmer • Commissioning foreman • Service technician

If you are using the KeStudio U3 tool suite:

Doc.No.	Name	Target group
DE: 1000868 EN: 1000869	System manual Kemro automation system	<ul style="list-style-type: none"> • Project engineer • Electrician • Programmer • Commissioning foreman • Service technician

2 Safety notes

2.1 Representation

At various points in this manual you will see notes and precautionary warnings regarding possible hazards. The symbols used have the following meaning:



DANGER!

- indicates an imminently hazardous situation which will result in death or serious bodily injury if the corresponding precautions are not taken.
-



WARNING!

- indicates a potentially hazardous situation which can result in death or serious bodily injury if the corresponding precautions are not taken.
-



CAUTION!

- means that if the corresponding safety measures are not taken, a potentially hazardous situation can occur that may result in property injury or slight bodily injury.
-

CAUTION

- CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in damage to property.
-



- This symbol reminds you of the possible consequences of touching electrostatically sensitive components.
-

Information

Useful practical tips and information on the use of equipment are identified by the "Information" symbol. They do not contain any information that warns about potentially dangerous or harmful functions.

2.2 General safety instructions



WARNING!

- It is absolutely essential to observe the safety instructions in the system manual.
 - The module is defined as "open type equipment" (UL508) or as "offenes Betriebsmittel" (EN 61131-2) and must therefore be installed in a control cabinet.
-

CAUTION

Improper use of the assembly or the control system leads to irreparable damage!

- Turn off the power supply before inserting or removing the module. Otherwise, the module can be destroyed or undefined signal states can lead to damage of the control system.
-



When removed from its casing this module is sensitive to electrostatic discharge. Before handling the modules touch a grounded metal object in order to discharge any static electricity from your body.

3 Description of the module

The SX 220/A is a serial option module (Current Loop) for slotting in CPU modules of the type CP 2xx/x.

Information

The module's functionality is only guaranteed if used within a CP 23x/x or CP 25x/x. The module is not designed for connection with foreign modules.

3.1 Front view

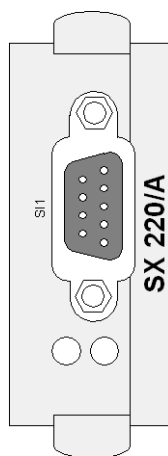


Fig.3-1: SX 220/A front view

4 Installation instructions

The module has been designed for operation with a CP 23x/x or CP 25x/x. It is inserted into **left** slot.

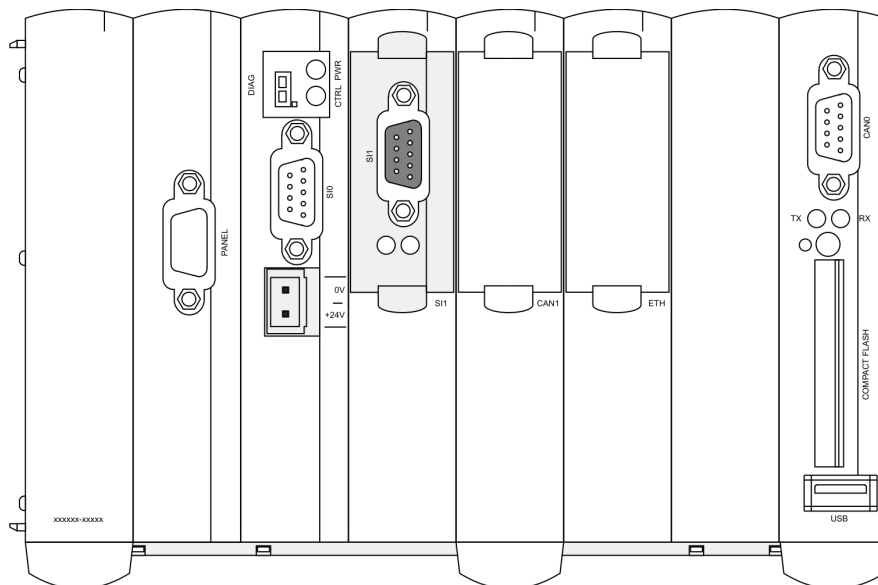


Fig.4-1: Use in a CP module

Information

The option modules may not be plugged or removed, if the CPU module switched on.

4.1 Inserting an option module into slot

- 1) Turn off the power supply.
- 2) Remove dummy module.
- 3) Insert module in the correct position (labeling "SX 220/A" right) into the left slot.

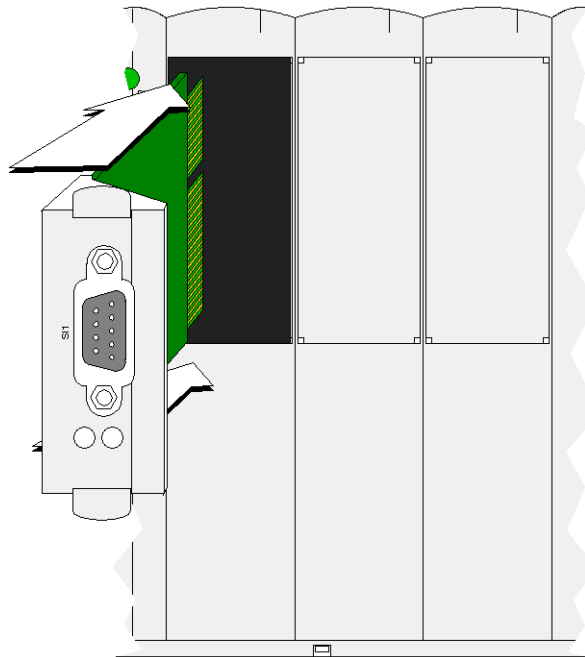


Fig.4-2: Inserting the SX 220/A option module

4.2 Removing an option module

- 1) Turn off the power supply.
- 2) Pull module from the slot.
- 3) Insert dummy module

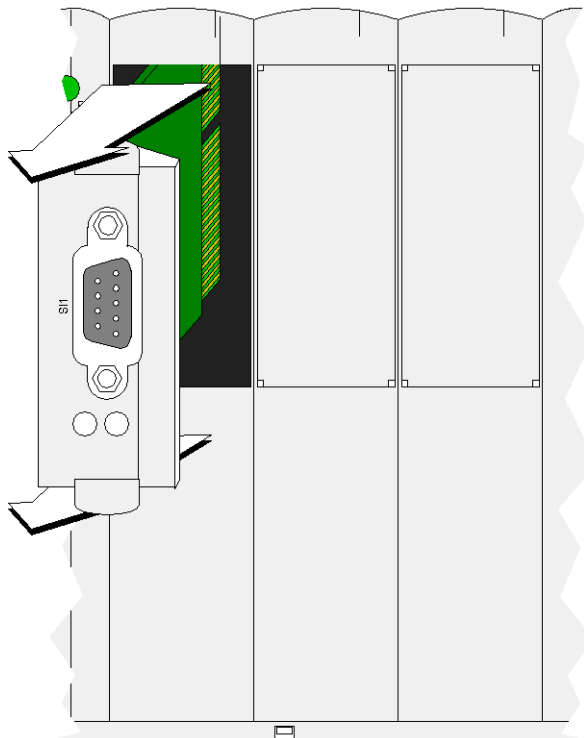


Fig.4-3: Removing the SX 220/A option module

5 Connections and wiring

5.1 General information on wiring and shielding

This section covers issues that concern in particular the serial interface connections.

The following is valid for all serial interfaces:

- Use shielded cables
- Contact shield directly at metallic interface plug casing

	Required cable (must be shielded in all cases)	Take account of cable termination
Current loop	Twisted paired wiring	No
RS 232 C	Twisted pair, with signal ground	No
RS-422-A <small>unidirectional</small>	Twisted pair, with signal ground	Yes
RS-422-A <small>bidirectional</small>	2x twisted pair line with 1 signal ground	Yes
RS-485-A	Twisted pair, with signal ground	Yes

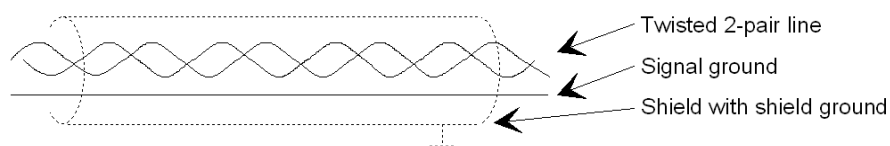


Fig.5-1: Structure of a shielded twisted pair line with signal ground

5.2 Current loop interface

5.2.1 Connection example

The following connection examples show three possible configurations of the serial option module SX 220/A.

Example 1: Configuration with active sender and passive receiver.

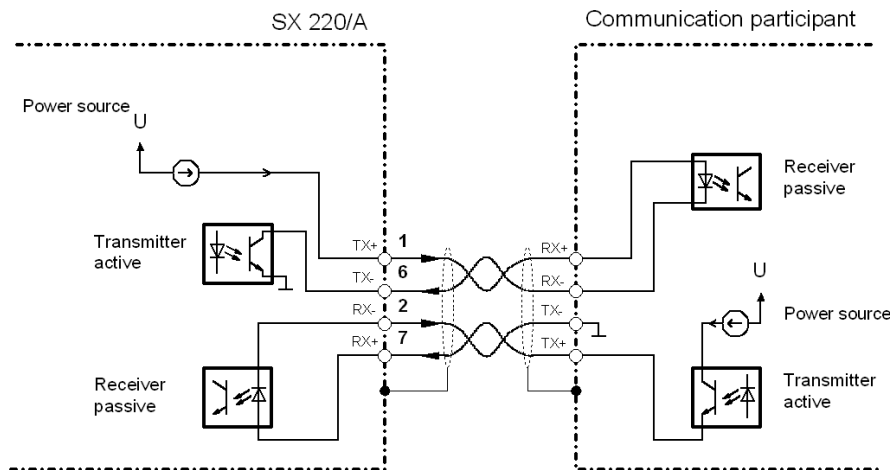


Fig.5-2: Example 1: SENDER ACTIVE and RECEIVER PASSIVE

Example 2: Configuration with passive sender and active receiver

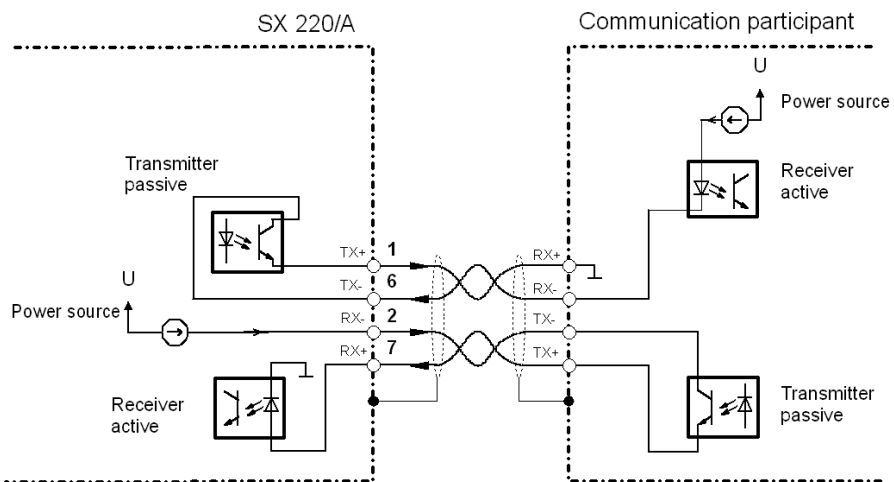


Fig.5-3: Example 2: SENDER PASSIVE and RECEIVER ACTIVE

Example 3: Configuration with active sender and passive receiver with a 2-wire interface

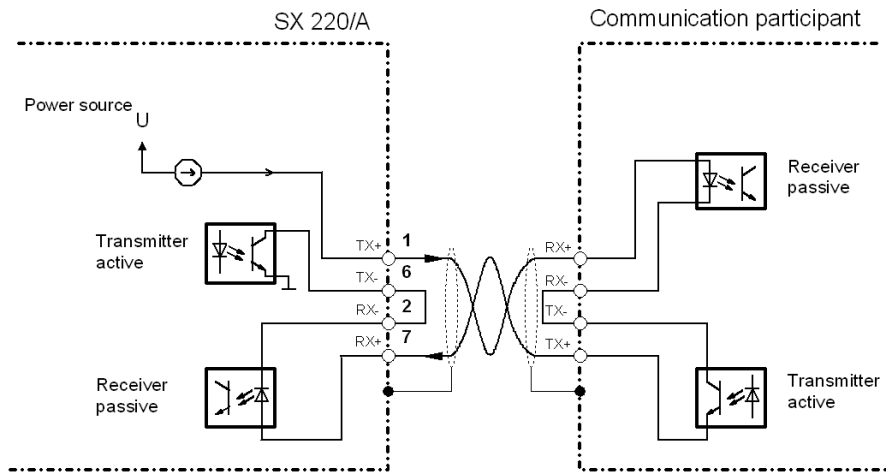


Fig.5-4: Example 3: SENDER ACTIVE and RECEIVER PASSIVE with 2-wire interface

5.2.2 Pin assignment

The module is connected to the bus with a 9-pole DSUP male connector.

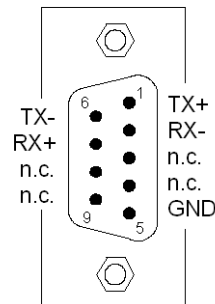


Fig.5-5: Assignment CL interface, DSUB-plug connection seen from front

Pin no.	Signal designation		Power source / sink
1	TX+	Sender	Source (active and passive)
6	TX-	Sender	Sink (active and passive)
2	RX+	Receiver	Source (active and passive)
7	RX-	Receiver	Sink (active and passive)
5	GND	ground	---

5.2.3 Loop currents and voltages

Loop current at	"0"	0 mA
	"1"	20 mA

Loop voltage	in operating mode "active"	max. 17 V
Voltage drop	per receiver	≤ 3 V
	per sender	≤ 2 V

5.2.4 Operating modes "active" and "passive"

Sender and receiver of the SX 220/A can be configured "active" or "passive":

TX active:	An active sender module feeds currency and interrupts this currency according to the digital transmission. Only one module per currency loop may be configured "active".
RX active:	An active receiver module feeds currency, which is interrupted by sender module that is configured as "passive" according to the digital transmission.
TX passive:	A passive sender module acts as switch, which interrupts the currency circuit according to the digital transmission. The currency is feed by a receiver module that is configured as "active".
RX passive:	A passive receiver module detect currency flow or currency interruption in the transmission loop.

5.2.5 DIP switch position

The configuration of the SX 220/A to active or passive status is done via the DIP-switch.

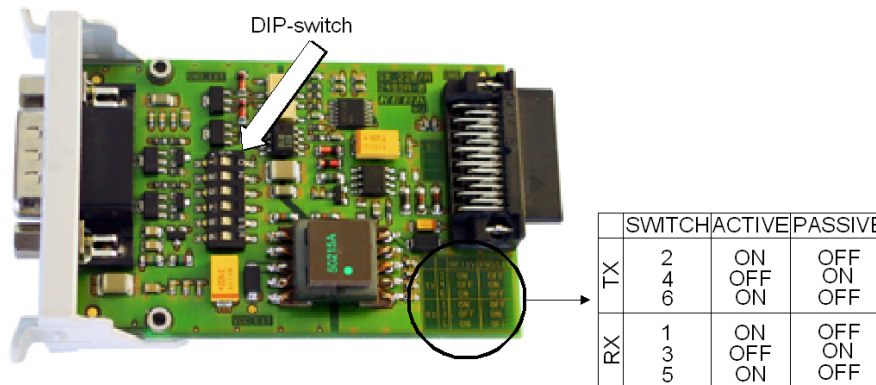


Fig.5-6: Position of the DIP switch and DIP switch position at the SX 220/A

5.2.6 Cable and plug specification

See System handbook.

5.3 EMC and wiring guidelines

Pay attention from the outset to careful wiring and shielding.

Further information: See system manual.

6 Configuration

General information

A [Konnte nicht in genstrings finden: key: System sprache: en] system needs data for the configuration of system performance, its I/O-devices and interfaces. The system reads this data during the start-up operation and allocates them to its components and devices.

Configuration data is created by included configuration tools or by editing configuration files.

For further information to the configuration see the documentation of the included configuration tool.

7 Operating behavior

7.1 Start-up after Power-On

The module is passive and is configured and activated through the HOST.

7.2 Reset

The module can be reset by the HOST without the HOST itself having to be reset.

8 Disposal

8.1 Disposal of the module

CAUTION

Please observe the regulations regarding disposal of electric appliances and electronic devices!



- The symbol with the crossed-out waste container means that electrical and electronic devices including their accessories must not be disposed of in the household garbage.
- The materials are recyclable in accordance with their labeling. You can make an important contribution to protecting our environment by reusing, renewing and recycling materials and old appliances.

9 Technical data

9.1 Environmental conditions

Operating temperature:	+5 °C to +55 °C
Storage temperature:	-40 °C to 70 °C
Relative humidity of air:	10 % to 95 % (non condensing)
Vibration resistance:	according to EN 61131-2:2007
Shock resistance:	according to EN 61131-2:2007

9.2 Interface to CPU module

Interface type:	3.3 V TTL output of the UART
Connection:	CHAMP plug 30-pole
Power supply:	5V
Module recognition:	YES (Module given, YES/NO, no type recognized)

9.3 Serial interface

Interface type:	Current Loop, 9-pole pin plug
Transmission media:	Cable, shielded, 120 Ω
Galvanic isolation:	No
Baud rates:	To be set via software (from 1200 Baud to 9600 Baud)
Max. cable length:	1,000 m at 9600 Baud

9.4 Mechanics

Structure:	No casing; only front plate mounted on print
Protection class:	If module is slotted into control system, control system fulfills IP20
Weight:	31 g

10 EC directives and standards

10.1 EC directives

Guideline 2004/108/EG	EC guideline on electromagnetic compatibility
Guideline 2002/95/EG	RoHS guideline

10.2 Standards

To check the conformity of the system with the directives, the following non-binding legal European standards were applied:

10.2.1 General procedures and safety principles

EN 61131-1:2003	Programmable controllers - Part 1
-----------------	-----------------------------------

Information

This product was developed for the use in industrial areas and can cause radio interference when used in residential areas.

10.2.2 EMC guideline

EN 61131-2:2007	Programmable controllers - Part 2
-----------------	-----------------------------------

10.2.3 Electrical safety and fire protection

EN 61131-2:2007	Programmable controllers - Part 2
-----------------	-----------------------------------

10.2.4 Environmental and surrounding conditions

EN 61131-2:2007	Programmable controllers - Part 2
-----------------	-----------------------------------

10.3 Standards for the American market

10.3.1 UL test for industrial control equipment

UL 508, 2005	Industrial Control Equipment
--------------	------------------------------

11 Declaration of conformity



EC Declaration of Conformity



KEBA AG
Gewerbepark Urfahr
4041 Linz
AUSTRIA

Document No.: 64168/CE/2

We declare that the following product(s)

Name of product: **SX 2x0**

Variants: **SX 210/A, SX 220/A, SX 230/A**

From: **revision 00 (Mat.Nr. 74570), revision 01 (Mat.Nr. 75448)
revision 01 (Mat.Nr. 76783), revision 01 (Mat.Nr. 76784)
revision 06 (Mat.Nr. 64168), revision 01 (Mat.Nr. 68793)
revision 07 (Mat.Nr. 64170), revision 04 (Mat.Nr. 68288)
revision 04 (Mat.Nr. 68289)**

is/are in conformity with the essential requirements of the following European Council Directive(s):

∞ **EC-Directive relating to electromagnetic compatibility 2004/108/EC**

Conformity to the directive 2004/108/EC is assured by the compliance with the applicable parts of the following harmonized european standards:

∞ **EN 61131-2:2007**

Important notes:

Any modification on the product(s), that is performed without KEBA's consent will render this declaration invalid.

This declaration certifies the conformity with the directives mentioned, but does not imply any warranty of the features of the product(s).

The safety instructions contained in the documentation supplied with the product(s) must be followed.

kemro_k2_sx2x0-engl2